



























Button operation

 
Function	button	operation
Arming		press once
Disarming		press once
Locking(driving\valet mode)		press once
Unlock(driving\valet mode)		press once
Warn away mode		press twice
Silence arming		press once
Silence disarming		press once
Bypass sensor arming(arming)	 + 	press 3 seconds
Anti-robbing(driving)		press twice
Car searching(arming)		press once
Silence disarming(arming)		press once
Trunk release		press once
		press 2 seconds
Active anti-hijack forearm	 + 	press 2 seconds + key on
Disable anti-hijack forearm	 + 	press 2 seconds + key on
Active valet mode	 + 	press once simultanceonsly + key on
Disable valet mode	 +  / 	press once


Functions

1.Arming:1)If the door\trunk\hood is closed properly, press  button once, the horn will chirp once, the direction lights will flash once, the door will be locked, the window closer will output 30 seconds(the sensor is available after this time), the LED will flash after five seconds to indicate the system is armed; 2).The system can be programmed to delay 30 seconds or 5 seconds(refer to menu 2)to arm door, but for the progressive trigger vehicle, it should be programmed to 30 seconds, if the door\trunk\hood is closed improperly, when you arm the system, the horn will chirp three times and the direction lights will flash three times after five seconds, and the system will active the arm mode after 30 seconds.

Note: you can press  button to stop alarming, and the system keeps arming.


2.Silence arming:press  button once, if the door/trunk/hood is closed properly, the direction lights will flash once, the door will be locked, the window closer will output 30 seconds (the sensor is available after this time), the LED will flash after five seconds to indicate the system is armed.



Note: you can press  button to stop alarming, and the system keeps arming, but if the door is opened, the horn will chirp.

3.Disarming: press  button once, the horn will chirp twice (no chirp at silence mode), the direction lights will flash twice, the door will unlock, and the LED will turn off to indicate the system is disarmed. If the horn chirp three time and the direction lights flash three times when you disarm the system, it means that the system was triggered at your absence, the LED will tell you which zone was triggered.


4. Protection during system arming: during arming:


- 1) .When the system was triggered slightly, the horn will chirp five times, the direction lights will flash five times to warn away.
- 2) .If the system was triggered one again within 10 second the horn will chirp, the direction lights will flash and the alarming cycle is 30 seconds.
- 3) .The system will alarm 30 seconds immediately when open the door or ignition, the system keeps arming status after the alarm stop, if one of zones is triggered continuously, the system will alarm 8 cycles and bypass this area to rearming.


5. Disarming with car key: When your transmitter is lost, damaged or disabled, you can use the valet switch to disarm the system. Turn the ignition to ON, and press the switch 5 seconds, the system will disarm, at this time the rearming and the passive arming are turned off, you should press button  to recover the functions.



6. Bypass the sensor: press  +  button three seconds at the same time during arming, the horn will chirp three times to indicate bypass the sensor, press these button again, the horn chirp twice to indicate exit.

7. Trunk release: press  button or press  button two seconds to open the trunk.

8. Car searching: Press  button once during arming, the horn will chirp five times and the direction lights will flash five times to tell the direction of the vehicle.

9. Silence car searching: Press  button during arming, only the direction lights flash five times to tell the direction of the car.

10. Warn away: during arming, if someone try to stolen the car, press  button twice, the direction lights will flash and the horn will continuous chirp to warn away the thief. This function can also be used as “HELP” signal when you meet accidental situation. Press this button again to stop alarming.

11. Anti-robbing: during driving if your vehicle is robbed, press  the button during valid range, the direction lights will flash quickly, press the button again, the LED will flash, after 15 seconds, the horn will chirp 10 seconds, and the direction lights will flash, after the horn stop alarming and then the engine will be locked, press  button to exit this mode.




12. Anti-hijack forearm: you can program this mode available or disable (refer to menu 2). If you are driving in very danger place, you can enter anti-hijack mode in advance. When you are driving, press  +  button 2 seconds, the horn will chirp once, the LED flash slowly to indicate the system access arming, if someone forced open the door, the LED flash quickly, the engine will disable after 3 minutes and the horn continue chirp. Press these buttons again, the horn will chirp twice and the LED will turn off to indicate exit the mode.

13. Car door alert: you can program this mode available or disable (refer to menu 1). Open the door during driving pause, the direction lights will flash 10 times to alert the rear vehicle.

14. Auto central lock: this function can be programmed to lock the door after 2 seconds or 15 seconds (refer to menu 2).

- 1) ,In order to keep your safety driving, when you turn the ignition to ON, press the brake pedal after 15 seconds, the door will lock if some one get off the vehicle and close the door, after 15 seconds the door will lock when you press the brake pedal. When the engine is disable, the door will unlock.
- 2) ,In order to keep your safety driving, when you turn the ignition to ON, press the brake pedal after 2 seconds, the door will lock. If some one get off the vehicle and close the door, after 2 seconds the door will lock when you press the brake pedal. When the engine is disable, the door will unlock. When the engine is disable, the door will unlock.

Note: When someone gets off the car during driving, if you press the brake pedal and close the door, it will lock after you second press the brake.

15.Valet mode: you can program this mode available or disable (refer to menu 1). It can prevent this system is passive arming; It is very useful when your vehicle is serviced. Turn the ignition to ON, and press  +  button at the same time, the horn will chirp once, the LED will turn on to indicate the system enter the valet mode, all the functions will be disable except remote lock and unlock the door and the trunk, press these button again or press  button once exit the mode, the horn will chirp twice and the LED will turn off.

16.Power-off memory: if the power is cut during arming alarming/disarming/anti-hijack for-earm mode/ralet mode, the system will recover to the state before the power-off after recover the power.

17.Auto rearming: you can program this function (refer to menu 1). If you disarm the system accidentally, but not open any door, the system will rearm the system automatically after 25 seconds.

18.Auto arming: you can program this function (refer to menu 1). If you not arming the system after 15 seconds when you closed the door properly, the horn will chirp three times to alert the driver, the system will silent arm automatically after 1 minute, but the door will unlock.

19.Learning code: turn the ignition to ON, and press the valet switch four times immediately, the horn will chirp once, and then press any button on the transmitter, the horn will chirp twice to indicate learning Successfully, and then the system will exit the learning mode, you should repeat the steps to learning next transmitter.

20.Deleting code: turn the ignition to ON within 1 minute after electrified, and press the valet switch 10 seconds, the horn will chirp twice to indicate delete successfully.(7)






LED indicator

LED state	Instruction
Flash slowly	During arming
Turn on	Valet mode
Turn off	Disarming
Flash once...Pause	Sensor slightly trigger
Flash twice...Pause	Sensor heavy trigger
Flash three times...Pause	Open door/trunk/hood


Enter program menu

1. Enter menu 1, program rearining car/door alert/passive arming/valet mode

- 1) .Open the door(Do not matter if direction light is flash),
- 2) .Turn the ignition to ON, and turn OFF, and then turn to ON.
- 3) .Press and hold the valet switch and then the LED will turn on, after three seconds it will turn off, release the valet swith and then the horn will chirp once to indicate enters the menu 1.

operation	Function	LED indicator
Press  button	Rearining	ON:LED flash once*
		*OFF: LED flash twice
Press  button	Car door alert	ON:LED flash once*
		*OFF: LED flash twice
Press  button	Passive arming	ON:LED flash once*
		*OFF: LED flash twice
Press  +  button	Valet mode ready	ON:LED flash once*
		*OFF: LED flash twice

2. Enter menu 2, program car door pulse/delay arming/antihijack forearm/car door delay lock.
After access the menu 1, press and hold the valet switch again, the LED will turn on, after 3 seconds, the LED will turn off and release the valet switch the horn will chirp twice to indicate enter menu 2.

operation	Function	LED indicator
Press  button	Car door pulse	Flash once:0.5seconds(power door)*
		Flash twice:4seconds(pneumatic door)
Press  button	Delay arming	Flash once: delay 5 second*
		Flash twice: delay 35 second
Press  button	Anti-hijack forearm	Flash once: ON*
		Flash twice: OFF
Press  +  button	Car door delay lock	LED flash once : delay 15 second*
		LED flash twice: delay 2 second

3. Exit the program mode: Close the door, and the horn will chirp 1 second to indicate exit the program mode.(the ignition key status have not effect others)
Note: “ * ” means the factory default.

