

SMP V09 24V Central Locking Controller User Manual

Functions

1. Arming

Press the button on the transmitter, the indexes will flash once - the central locking system will be activated.

2. Disarming

Press the button on the transmitter, the turn signal lights will flash twice - the central locking system will release.

3. Car search

Press the button to turn on the car search mode. The flashing of the indexes helps you find the vehicle.

4. Code teaching

Press switch SW1 on the central unit, the turn signals will illuminate - this indicates that you have entered the code teaching mode. Then press a button on the transmitter, the indexes will turn off - you have successfully paired the first transmitter with the system. Repeat the previous operation to teach each the second transmitter. You can teach up to 4 transmitters at a time, with the fifth started teaching erasing the older one.

5. Electronic / Pneumatic central locking option

If you open the cover of the central unit, you will find the jumpers there. The jumper JP1 must be set to position 3.5S if the central locking is pneumatic. In the case of an electronic lock, select position 0.5S. By default, the electronic lock is provided.

The warranty is conditional on installation by a specialist garage.

Importer;

i.M.Power Kft

1310 Szigetszentmiklós, Csepeli út 15

www.smpower.eu

