






SMP VO3TR central locking controller


User's Guide

1. **Close:** Press the  (close) button on the transmitter to close the doors. The turn signals flash once, the siren beeps twice. The window regulator outputs for 9 seconds

2. To select electric / pneumatic closing, press the  and  buttons simultaneously for 3 seconds. The indexes flash once when setting electric lock and three times when setting pneumatic lock.

3. **Open:** Press the  (open) button to open the doors. The turn signals flash twice, the siren (not supplied) beeps twice.

4. **Car Search:** In armed mode, press the  (close) button, the turn signals will flash three times. If pressed again, the indexes will flash for another 15 seconds. The flashing can also be stopped with the close button.

5. **Luggage Compartment Opening:** When disarmed, press the  (open) button for three seconds to open the luggage compartment. The pictogram of the boot button may differ depending on the transmitter type, so it can be:





Press for three seconds to open the boot.

This output must not be connected directly to the luggage compartment opening unit!

Negative / Positive output option to open the luggage compartment: As shown in the drawing, place the jumper as a function of the desired polarity for output J1: + 12V or output J2: -12V.

6. **Code Teaching:** If the transmitter is lost or damaged, you can teach the new transmitter to the central unit. (The system allows up to 3 transmitters.) To teach, follow these steps: Press the code teach switch on the main unit once, and the indexes will light up. Then press any key on the transmitter, the indexes will flash twice, indicating successful code teaching.

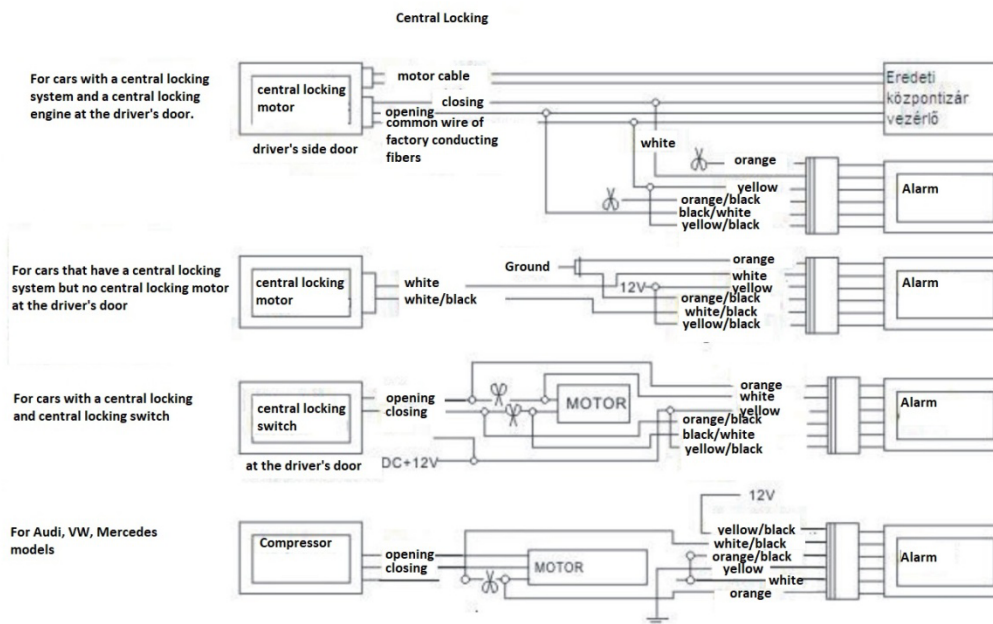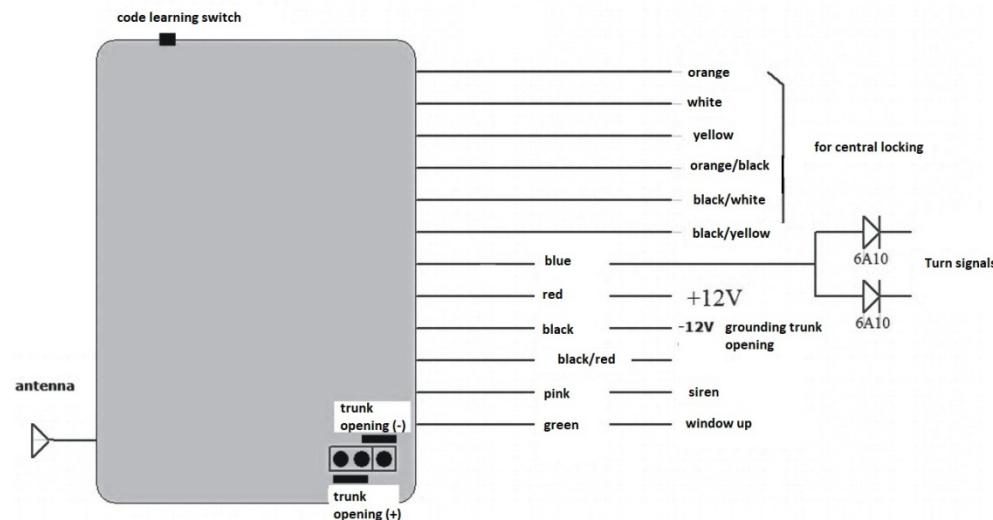

The warranty is conditional on installation by a specialist garage.

Importer; S.M.Power Kft., 2310 Szigetszentmiklós, Csepeli út 15., www.smpower.eu