



Arming:

Press the  button once so that the central locking system is activated automatically.

Disarm:

Press the  button once to release the central locking system automatically.

Code teaching:

Turn on the power, then open the cover of the main unit, press the microswitch, and the system enters code teaching mode. Then press any button on the transmitter to successfully pair the first transmitter. Repeat this operation to teach another transmitter. Up to 2 transmitters can be paired, if you start the process a third time, the codes taught so far will be deleted.

Luggage compartment opening:

Hold down the  button for 3 seconds and then the boot will open.

Properties:

- DC 12V ± 3V
- 18mm ± 1mm
- Tensile force: 45N ± 4N
- Operating temperature: -30 ° C to + 80 ° C
- Current flowing in the central unit: max.81mA

Prior to installation, make sure that the central locking system can be installed in your car and does not interfere with the car's original system.

After installation, roll up and down the windows a few times to check for scratches, then replace the door panel.

Make sure that the central unit is not exposed to water or high temperatures. If the transmitter range is reduced or the LED is off, replace the battery in the transmitter.

The warranty is conditional on installation by a specialist garage.

Importer; S.M.Power Kft., 2310 Szigetszentmiklós, Csepeli út 15
www.smpower.eu

